


P/N 65-020-02 Termination Block

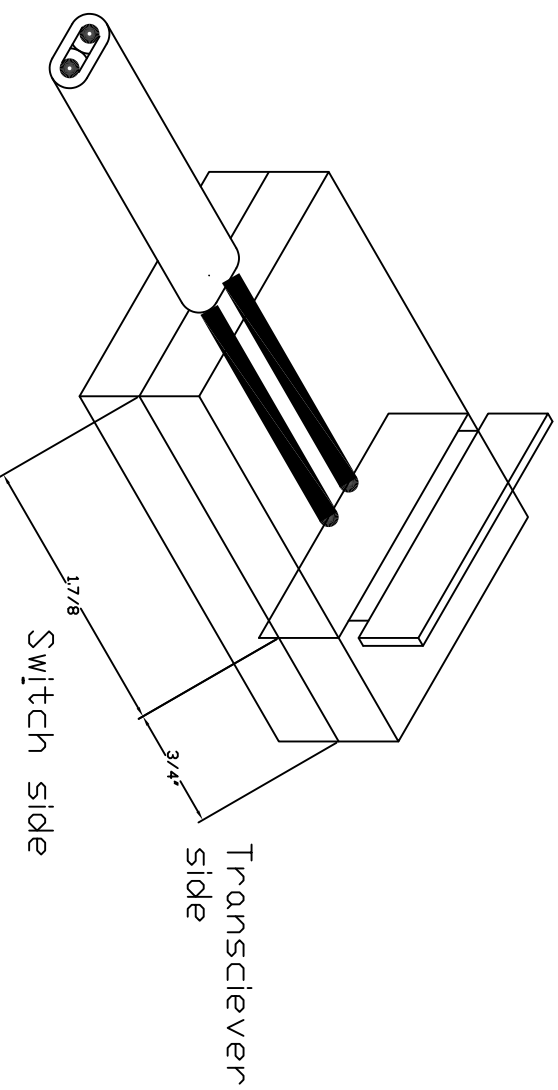

Insert BLACK cables thru BLOCK until DRANGE jacket is seated.
DEPRESS blade to flush-cut cable to proper length.
INSERT cable into SWITCH until seated. TIGHTEN screws to secure.